




# CADILLAC XT4 5 Door Hatchback 2020 - 2023

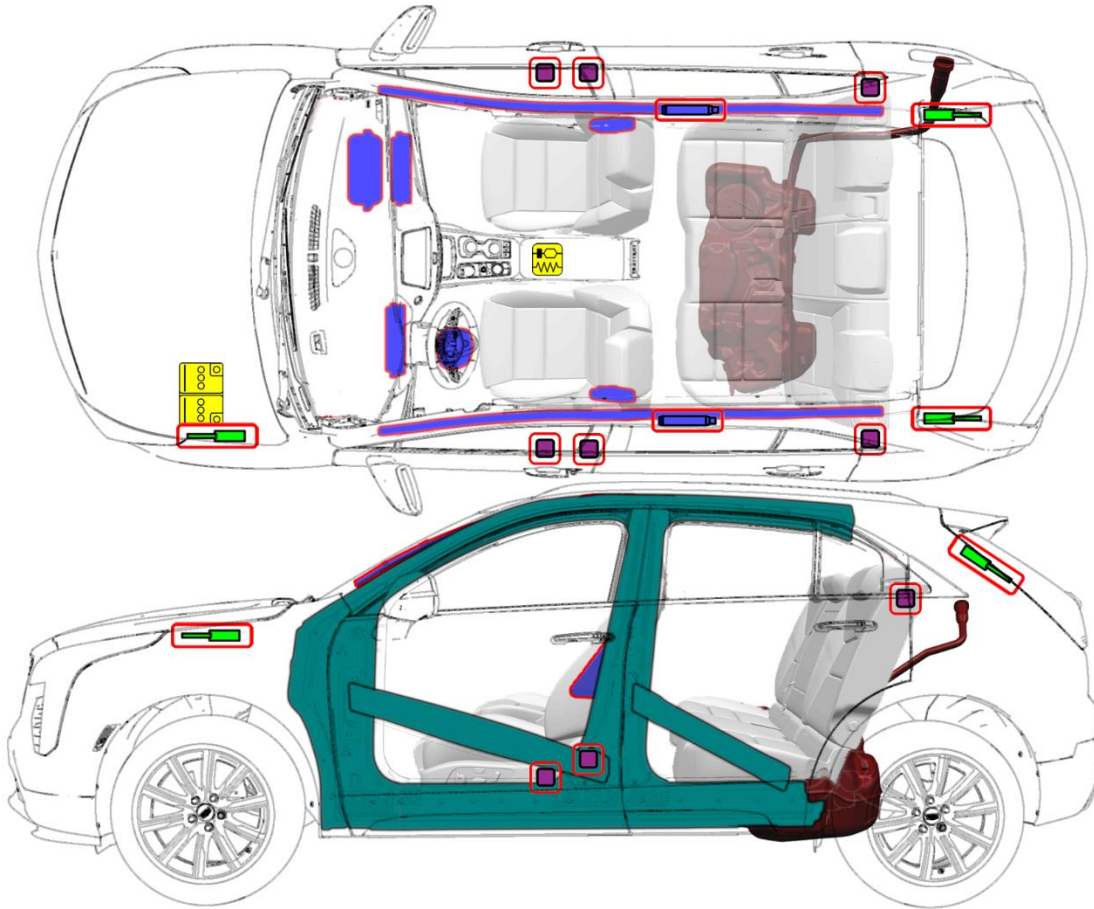

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/ Preloaded spring
	High strength zone		Battery low voltage		Fuel Tank				


## 1. Identification / recognition



## 2. Immobilization / stabilization / lifting

### IMMOBILIZE VEHICLE:


1. Block the wheels.
2. Press the Electric Parking Brake (EPB) switch momentarily. The red parking brake status light will flash and then stay on once the EPB is fully applied.
3. Press the button on the top of the shift lever to shift to P (Park).

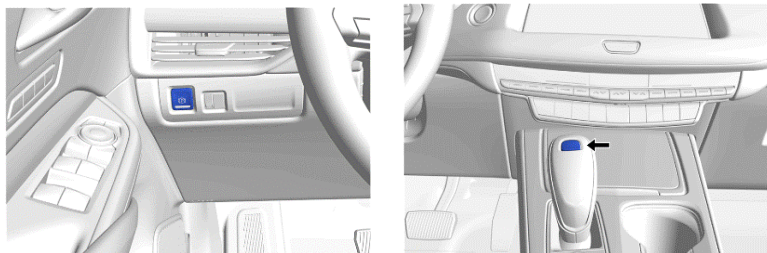

### LIFTING POINTS:





Appropriate vehicle lift points.

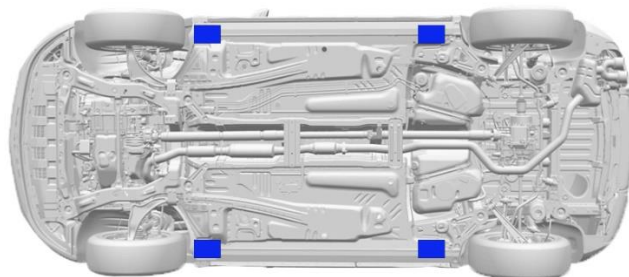

## 3. Disable direct hazards / safety regulations

### MAIN METHOD:

1. Press the POWER button to disable vehicle propulsion.
2. Open the hood.
3. Consider any manipulations of power devices in the vehicle (power seats, windows, etc.) **prior to** disconnecting the battery negative cable.
4. Remove the battery cover.
5. Disconnect the battery negative cable.

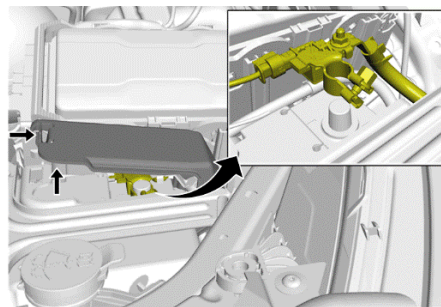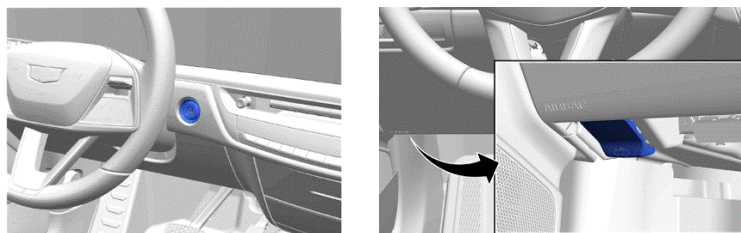


After disabling low voltage power, wait at least 10 seconds to allow any un-deployed airbag reserve energy to dissipate.

#### 4. Access to the occupants

 
Refer to the front page for illustrations of high strength zones and specific safety related component locations.



The windshield and sunroof are made of Laminated Glass




The door windows and rear window are made of Tempered Glass

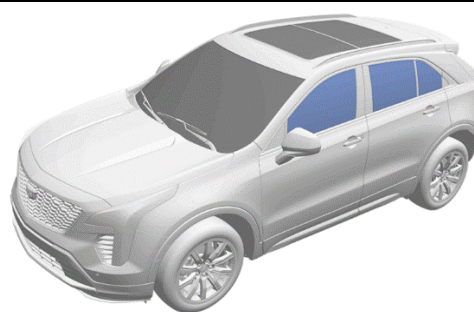

If the doors remain locked, pull **twice** on the inside door handle to gain access to the occupant at each seating location.

**NOTE:** An alternative method for rear passenger access may be necessary if the rear door child safety locks are engaged.

#### Steering Column Tilt and Telescoping Control

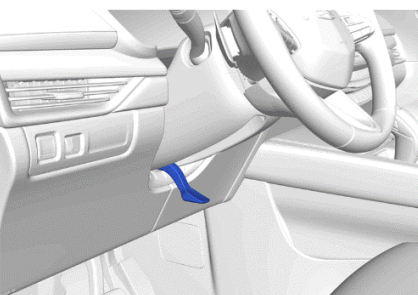

#### Seat Control Switches



#### 5. Stored energy / liquids / gases / solids

		12 Volt
		60,2L (FWD) 61,7L (AWD)
		59,4L (FWD) 60,9L (AWD)
		R-1234yf 0,69kg

#### 6. In case of fire



Always wear Self-Contained Breathing Apparatus (SCBA).  
Use copious amounts of water to extinguish a fire.

## 7. In case of submersion


After the vehicle was removed from the water, do the following:

1. Allow the vehicle to dry out.
2. Disconnect the battery negative cable. Refer to Section 3.


## 8. Towing / transportation / storage

Carefully open the cover in the fascia by using the small notch that conceals the tow eye socket.

Install the tow eye into the socket and turn it until it is fully tightened. When the tow eye is removed, reinstall the cover with the notch in the original position.

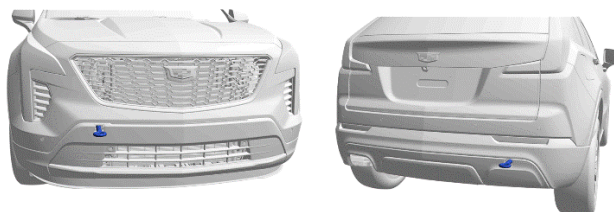



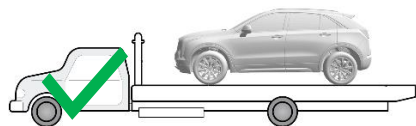










General Motors recommends a flatbed carrier or tow dollies to transport a disabled vehicle.



## 9. Important additional information

This vehicle is supported by OnStar, where available.

## 10. Explanation of pictograms used

	Lead acid battery		General warning sign		Warning, Low Temperature
	Gasoline		Diesel		Flammable
	Explosive		Toxic		Corrosive
	Injury Risk		Use Water		Lifting Points
	Air Conditioning Component				